

Tech-Set™

cps®

Tech-Set® TR19 SERIES 2 Cylinder Commercial Refrigerant Recovery Machine



OWNER'S MANUAL (English)

Français, Español, Deutsch and latest updates: www.cpsproducts.com

Series: TR19, TR19S, TR19E

TO BE OPERATED BY QUALIFIED PERSONNEL ONLY



Evaluated for performance in accordance with Sec. 600 of the Clean Air Act (Feb 29, 1996) using AHRI-740-98 test methods.



THIS EQUIPMENT HAS BEEN VERIFIED BY UNDERWRITERS LABORATORIES INC. TO MEET EPA'S MINIMUM REQUIREMENTS FOR RECOVERY EQUIPMENT INTENDED FOR USE WITH ALL SYSTEMS CONTAINING REFRIGERANTS FROM AHRI-740-98 CATEGORIES III, IV, AND V. UL CONTROL NUMBER 2HA5.

CONTENTS

Key Features.....	2
General Safety Instructions	3
Specifications.....	4
Unit Layout.....	4
Direct Vapor or Liquid Recovery	5
High Speed Direct Liquid Recovery	6
Push - Pull Liquid Recovery	7
Routine Maintenance.....	8
Warranty	8

KEY FEATURES

- Maintenance free oilless compressor design
- Aesthetically unique industrial type styling
- Precision machined from aluminum and steel components
- Permanently lubricated and sealed main bearings
- Improved piston seal design for less leakage and deeper vacuums
- 550 psig high pressure cutoff switch with LED indicator
- Cleanable 100 mesh inlet filter
- Weighs less than 19 lbs.
- Special cooling system design improves compressor longevity
- Efficient suction and discharge valve design for faster recovery
- Durable crankshaft design for improved reliability
- Unique head design for superior performance
- Patents pending

GENERAL SAFETY INSTRUCTIONS

Please read, follow and understand the contents of this entire manual, with special attention given to Danger, Warning and Caution statements.

FOR USE BY PROFESSIONALLY TRAINED AND CERTIFIED OPERATORS ONLY. MOST STATES, COUNTRIES, ETC., MAY REQUIRE USER TO BE LICENSED. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT AGENCY.

- DANGER:** The recovery tank used with this contains liquid refrigerant. Overfilling recovery tank may cause a violent rupture resulting in severe injury or even death. **As a minimum, please use a scale to continuously monitor recovery tank weight.**
- DANGER:** **EXPLOSION RISK!** This unit is not certified as 'explosion proof' for explosive rated environments. It is only to be used in normal environments.
- DANGER:** **ELECTRICAL SHOCK HAZARD:** Always disconnect power source when servicing this equipment.
- WARNING:** Do not use equipment in the vicinity of spilled or open containers of gasoline or other flammable substances.
- WARNING:** All hoses may contain liquid refrigerant under pressure. Contact with refrigerant may cause frostbite or other related injuries. Wear proper personal protective equipment such as safety goggles and gloves. When disconnecting any hose, please use extreme caution.
- WARNING:** **TO REDUCE RISK OF FIRE:** Avoid use of an extension cord because extension cord may overheat. If you must use an extension cord, use 10 awg minimum.
- WARNING:** Avoid breathing refrigerant vapors and lubricant vapor or mist. Breathing high concentration levels may cause heart arrhythmia, loss of consciousness, or even cause suffocation. Exposure may irritate eyes, nose, throat and skin. Please read manufacturer's Material Safety Data Sheet for further safety information on refrigerants and lubricants.
- WARNING:** Make certain all safety devices are functioning properly before operating equipment.
- CAUTION:** To avoid cross contamination of refrigerant and potential leakage to the atmosphere, proper hoses and fittings should be used and checked for damage.
- CAUTION:** To avoid overfilling refrigerant tank, read and follow manufacturer's recommended filling instructions for refrigerant being recovered.
- CAUTION:** This equipment is intended for use of one refrigerant at a time. Mixing of different refrigerants will cause your recovered supply of refrigerant to become contaminated.
- Note: It is very expensive to destroy mixed or damaged refrigerants.



SPECIFICATIONS


Model Number	TR19	TR19S	TR19E
Voltage (Hz)	115 V 50 / 60 Hz	220-240 V 50 / 60 Hz 1PH	220-240 V 50 / 60 Hz 1PH
Motor Size (Horsepower)	1/2 HP		
Motor Thermally Protected	Yes		
Compressor Type	2 Cylinder Oil-less Reciprocating Compressor		
Overload Protection	Motor Thermally Protected		
Power Consumption	500 W		
High Pressure Shut-Off	550 psig Auto Reset	550 psig Auto Reset	525 psig (38 bar) Manual Reset
Refrigerants	ARI740 Class III	R-12, R-134a, R-401C, R-406A, R-500	R-12, R-134a, R-22, R-401A, R-401B, R-401C, R-402A, R-402B, R-404A, R-406A, R-407A, R-407B, R-407C, R-407D, R-407E, R-407F, R408A, R-409A, R-410A R-411A, R-411B, R-412A, R-500, R-502, R-507A, R-509A
	ARI740 Class IV	R-22, R-401A/B, R-402B, R-407C/D/E/F, R408A, R-409A, R-411A/B, R-412A, R-502, R-509A	
	ARI740 Class V	R-402A, R-404A, R-407A/B, R-410A/B, R-507A, R-32	
Operating Temperature Range	32°F to 120°F (0°C to 49°C)		
Power Cord Length	6 Ft.		
Dimensions	6" x 12" x 9" (15cm x 30cm x 23cm)		
Weight	18.7 lbs (8.5 kg)		
Approvals	UL, TUV		
Warranty (Years)	1		

*Verified UL Flow Rate @ 60Hz (Reduce 15% for all 50Hz models)

Refrigerant	Direct Vapor (kg/min)	Direct Liquid (kg/min)	Push - Pull Liquid (kg/min)	High Temp Vapor Rate (kg/min)
R410a	0.12	3.79	11.00	n/a
R22	0.14	3.16	11.00	0.13
R134a	0.13	1.95	9.37	n/a
R407c	0.15	3.01	10.71	n/a

*Evaluated for performance in accordance with Sec. 608 of the Clean Air Act (Feb 29, 1996) using AHRI-740-98 test methods.

TR19 SERIES UNIT LAYOUT

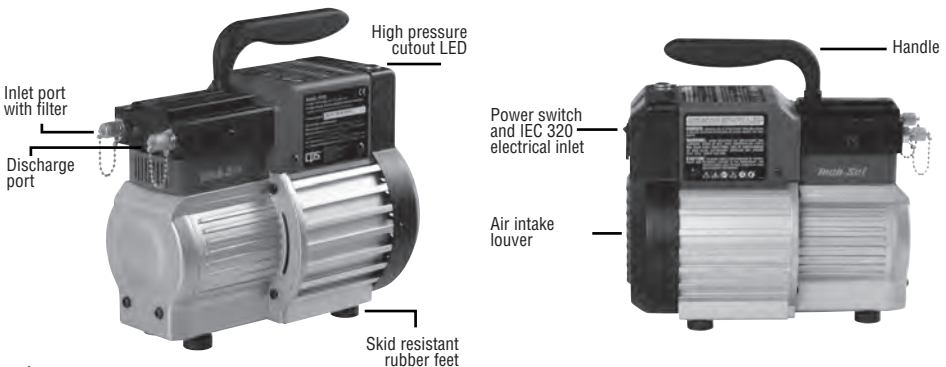

DIRECT VAPOR OR LIQUID RECOVERY

The following is recommended to maximize recovery rates;


- A. Use the shortest length of 3/8" ID refrigeration hose on the suction side of the unit.
- B. If the refrigerant is clean, remove all suction side filters, screens, etc...
- C. Remove all Schrader type valve cores and any valve depressors from the hoses and service valves.
- D. Use an evacuated DOT tank.
- E. If the unit trips off on High Pressure, change the recovery cylinder.
- F. When recovering large amounts of R410a or if recovering under very high ambient temperatures, we suggest our accessory the MT69 Molecular Transformator.

1. Connect the unit as shown in Diagram - 1. The technician will need to use a refrigerant manifold and one spare hose. The manifold should be connected between the unit being serviced and the TR19 IN port. The spare hose should connect from the TR19 OUT port to an evacuated DOT recovery tank vapor valve. Note: The recovery tank must be rated for (38 bar) 550 PSI.
2. Open the vapor valve on the DOT recovery tank.
3. Keep the manifold valves closed at this time.
4. Push the main power switch "ON".
5. Once unit has started, open both HI & LO manifold valves to start the refrigerant recovery flow.

Note: The TR19 is designed to directly recover large amounts of liquid refrigerant. If during vapor recovery process the compressor begins to make a slugging or hammering noise, meter the incoming liquid refrigerant by closing the low side manifold valve until the noise subsides.

6. The TR19 will run continuously. When a 10" hg. vacuum is observed on the low side manifold gauge, close both the LO & HI side manifold valves off.
7. If the pressure on the HI side manifold gauge starts to rise, repeat steps 4-6. If HI side manifold gauge remains in a vacuum, close all tank, manifold and hose valves. Remove discharge hose from TR19 outlet port. Recovery and Self-Clearing are now complete.

Diagram 1 - Direct Vapor Or Liquid Recovery

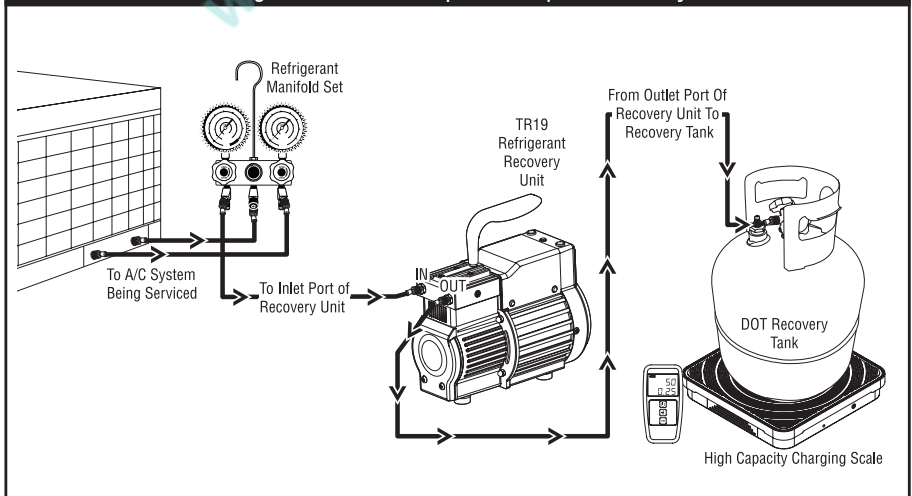

HIGH SPEED DIRECT LIQUID RECOVERY

The following is recommended to maximize recovery rates;

- A. Use the shortest length of 1/4" ID refrigeration hose on the suction side and discharge side of the unit.
- B. If the refrigerant is clean, remove all suction side filters, screens, etc...
- C. Remove all Schrader type valve cores and any valve depressors from the hoses and service valves.
- D. Use an evacuated DOT tank.
- E. Install a hose between the DOT recovery tank and vapor service valve on the A/C system being serviced. (See Diagram - 2)
- F. Use 90lb DOT recovery tank or larger to minimize tank change over.

1. Connect the unit as shown in Diagram - 2. The technician will need to use a refrigerant manifold (with sight glass) and two spare hoses. The manifold should be connected between the unit being serviced and the TR19 IN port. Connect a refrigerant hose from the TR19 OUT port to an evacuated DOT recovery tank liquid valve. Connect another refrigerant hose from the DOT tank vapor port to a service port of the unit being serviced.


Note: The recovery tank must be rated for (38 bar) 550 PSI.

2. Open both the vapor and liquid valves on the DOT recovery tank.
3. Keep the manifold valves closed at this time.
4. Push the main power switch "ON".
5. Once unit has started, open the LO manifold valve on the manifold to start the liquid refrigerant flow to the TR19. Monitor the liquid refrigerant flow in the manifold sight glass.

Note: The TR19 is designed to directly recover large amounts of liquid refrigerant. If during vapor recovery process the compressor begins to make a slugging or hammering noise, meter the incoming liquid refrigerant by closing the low side manifold valve until the noise subsides.

6. Once liquid refrigerant is no longer present in the manifold sight glass, close the DOT recovery tank vapor valve. This will transition the unit into direct vapor recovery.
7. Allow the TR19 to run continuously. When a 10" hg. vacuum is observed on the low side manifold gauge, close both the LO & HI side manifold valves off.
8. If the pressure on the LO side manifold gauge starts to rise, open LO side manifold valve and restart the TR19. If the LO side manifold gauge remains in a vacuum, close all tank, manifold and hose valves. Remove discharge hose from TR19 outlet port. Recovery and Self-Clearing are now complete.

Diagram 2 - High Speed Direct Liquid Recovery

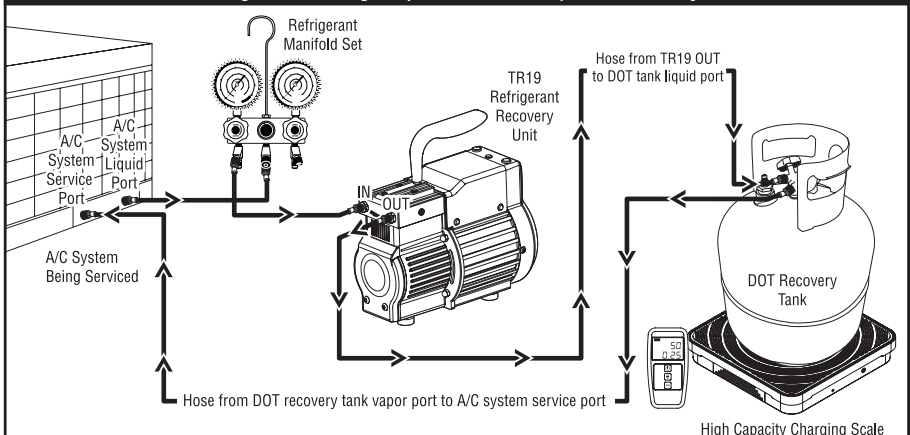

PUSH-PULL LIQUID RECOVERY

The following is recommended to maximize recovery rates;


- A. Use the shortest length of 3/8" ID refrigeration hose on the suction side of the unit to the vapor port on the tank.
- B. Use 3/8" ID refrigerant hoses from the system liquid service valve to the liquid port on the tank.
- C. If the refrigerant is clean, remove all suction side filters, screens, etc...
- D. Remove all Schrader type valve cores and any valve depressors from the hoses and service valves.
- E. Use 90lb DOT recovery tank or larger to minimize tank change over.

1. Connect the unit as shown in Diagram - 3. The technician will need to use a refrigerant manifold with sight glass and two spare hoses. The manifold should be connected between the liquid service port of the system being serviced and the DOT Recovery tank liquid valve. One spare hose should connect from the TR19 IN port to the DOT recovery tank vapor valve. The other spare hose should connect from the TR19 OUT port to the vapor service port on the system being serviced.

Note: The DOT recovery tank must be rated for (38 bar) 550 PSI.

2. Close the manifold LO side valve. Open the manifold HI side valve. Open the DOT recovery tank's liquid valve.
3. Push the main power switch "ON".
4. Open the DOT recovery tank vapor valve. A Push-Pull flow is now enabled.
5. Monitor the scale for DOT recovery tank capacity.
6. Monitor the sight glass in the manifold for the presence of liquid refrigerant. Once liquid refrigerant is no longer being pushed out of the A/C system being recovered, close the vapor valve on the DOT recovery tank. Let run for 30 seconds, then turn off unit.

Note: The Push-Pull recovery does not completely recover all the refrigerant. It will be necessary to proceed to Direct Vapor Recovery Operation (page 6) to complete the recovery process.

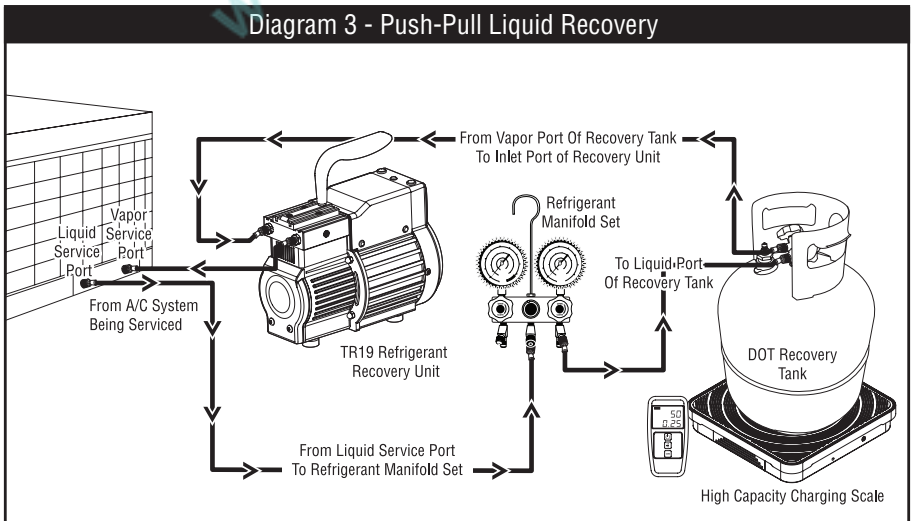

ROUTINE MAINTENANCE

Filter Maintenance: The TR19 is equipped with a 100-mesh screen filter. This filter should be checked periodically. A partially clogged filter will slow recovery rate.

Check filter cartridge as follows:

1. Use a 5/8" socket or boxed end wrench to remove **IN** port as shown in **Figure 1**.
2. Remove suction port-filter cartridge as shown in **Figure 2**.
3. Clean cartridge or replace with new cartridge. (CPS #CRXF3)
4. Inspect O-ring. Re-lubricate with compressor oil or equivalent.
5. Place filter cartridge back into suction port fitting.
6. Hand tighten this assembly back onto TR19.
7. Use 5/8" socket or boxed end wrench to tighten 1/8 of a turn. Do not over tighten; O-ring damage may occur.
8. Check connection for leaks.

Piston Seal Maintenance: In cases of virgin refrigerant recovery, it is recommended to add .25 ounce of refrigerant oil to inlet port before each use.

Figure 1


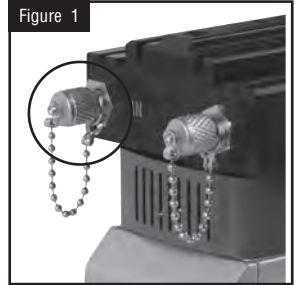


Figure 2

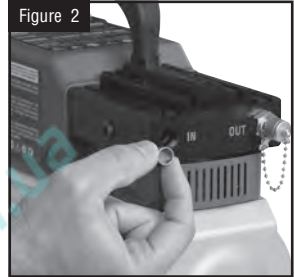

WARRANTY

CPS® Products, Inc. guarantees that all products are free of manufacturing and material defects to the original owner for one year from date of purchase. If equipment should fail during guarantee period it will be repaired or replaced (at our option) at no charge. This guarantee does not apply to equipment that has been altered, misused or solely in need of field service maintenance. All repaired equipment will carry an independent 90 day warranty. This repair policy does not include equipment that is determined to be beyond economical repair.

WARRANTY DISCLAIMER: Use this device to recover only HVAC/R refrigerants from sealed HVAC/R systems. **WARRANTY VOIDED IF USED FOR ANY OTHER PURPOSE.**

LOCATIONS

CPS PRODUCTS, INC. U.S.A. (Headquarters)

1010 East 31st Street,
Hialeah, Florida 33013, USA
Tel: 305-687-4121, 1-800-277-3808
Fax: 305-687-3743
E-mail: info@cpsproducts.com
Website: www.cpsproducts.com

CPS PRODUCTS CANADA LTD.

1324 Blundell Road
Mississauga, ON, L4Y 1M5
Tel: 905.615.8620, Fax: 905.615.9745
E-mail: info@cpsproducts.com
Website: www.cpsproducts.com

CPS PRODUCTS N.V

Krijgsbaan 241, 2070
Zwijndrecht, Belgium
Tel: (323) 281 30 40, Fax: (323) 281 65 83
E-mail: info@cpsproducts.be

CPS AUSTRALIA PTY. LTD.

109 Welland Avenue,
Welland, South Australia 5007
Tel: +61 8 8340 7055, Fax: +61 8 8340 7033
E-mail: sales@cpsaustralia.com.au

CPS ASIA

89 Short Street #06-06/07 Golden Wall Centre
Singapore 188216
Tel: +65-63375691, Fax: +65-63375692
Email: cpsasia@singnet.com.sg

For latest update to this Owner's Manual, go to www.cpsproducts.com